


## APPLICATION NOTE K-1200

Using discrete buttons in place of a Keypad

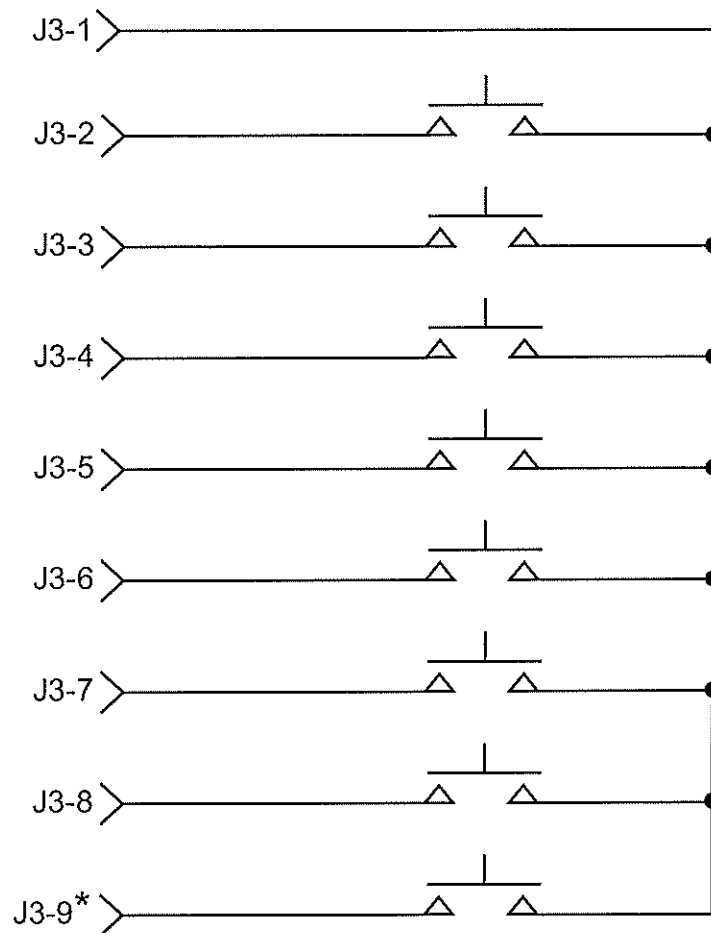

### PROCEDURE:

Go into programming:

8 Apartment buttons enter #35

7 Apartment buttons and 1 Postal Lock enter #36

Restore Keypad mode enter #34

Wait for 2 confirmation beeps

\* Pin must be added to board for this position.

If using Postal Lock input , do not wire an apartment button to Pin 9.